

BST CCD Solar system Image installation

1. Installation Driver


Put the included installation CD-ROM in your computer CD/DVD drive.


Connect your CCD Solar system Image thru the USB cable with the computer. The following screens will appear during the installation. **Must be USB 2.0.** →




If your computer has not the USB 2.0 cable, you will not see the above screen.

Please disregard this screen and direct double click disc to open the CD-ROM.

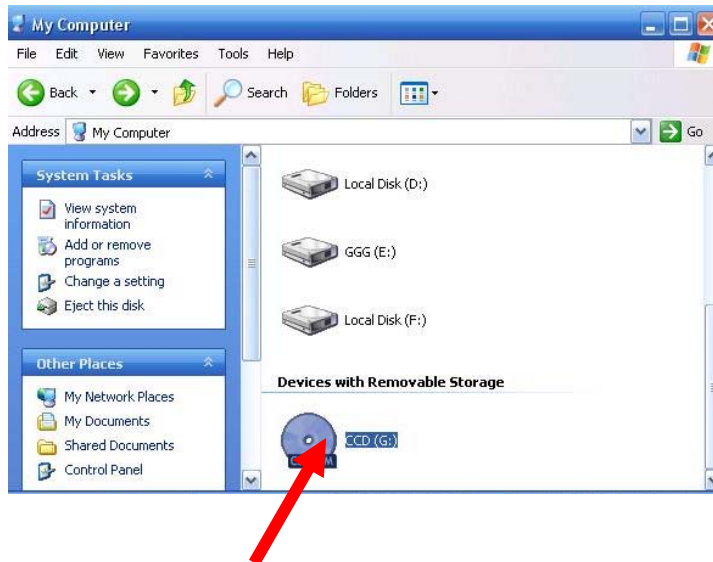


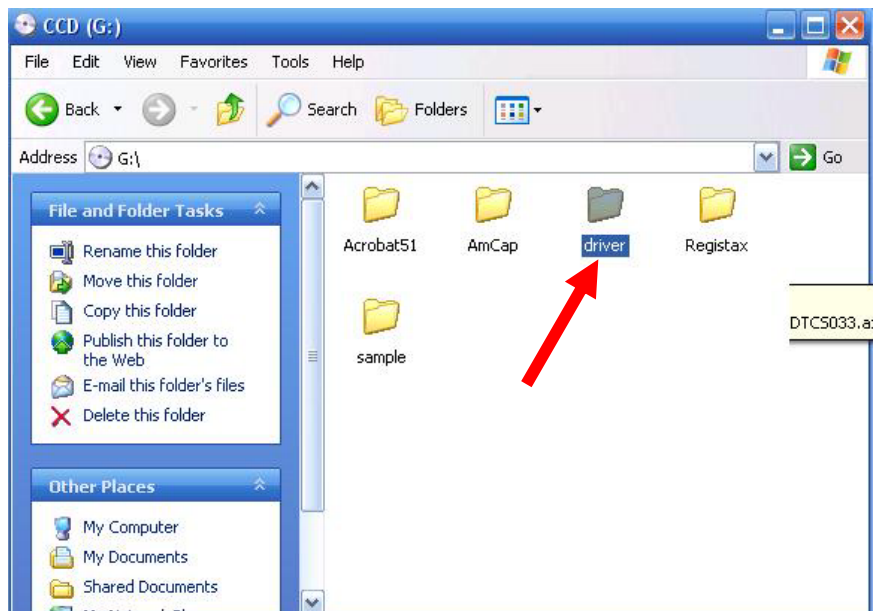

Now you will double click on the “driver” and it will take you to the next screen.

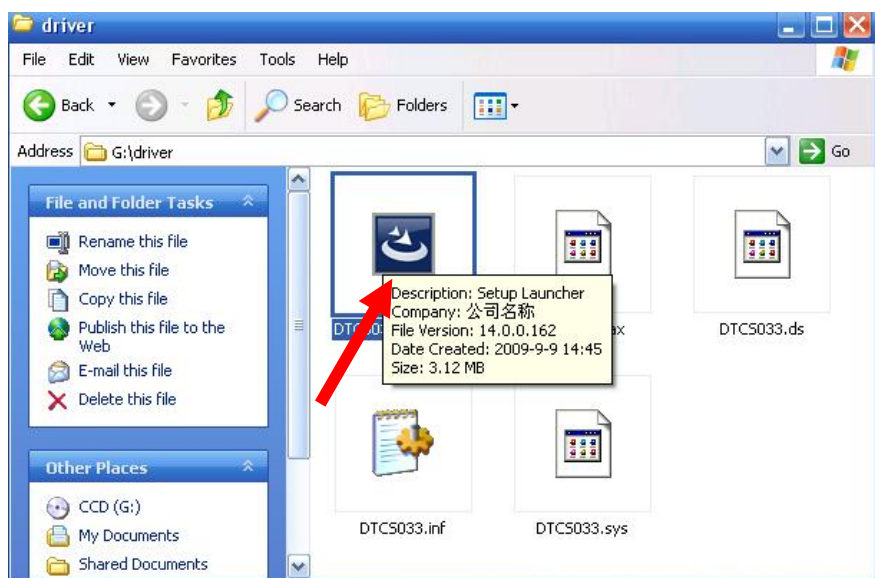

Now you will double click on “Setup” using the file that is highlighted on the screen directly above.

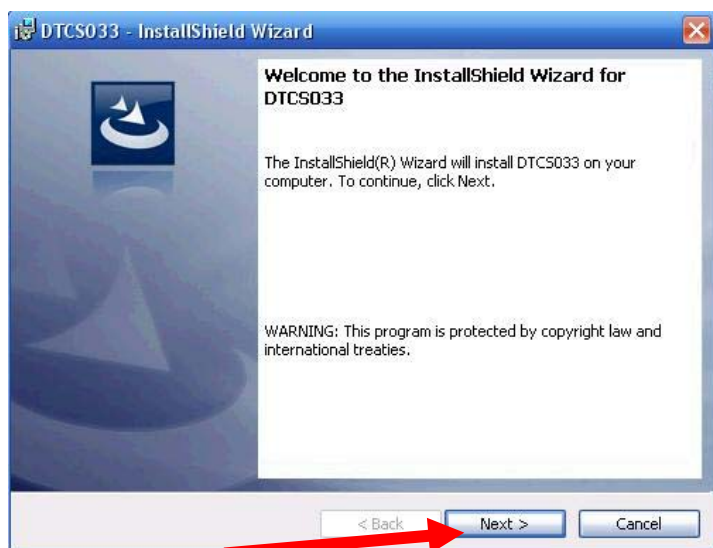

Click “Next”



Click "install"



Click "Finish"


2. If your CCD Solar system image can not work correctly, or you changed the USB cable. The computer will tell you that you need to re-install the driver. (If the screen without any information. Please update the driver thru the Device Manager.

Change USB jack.




Choice this option and click" Next"

You will see

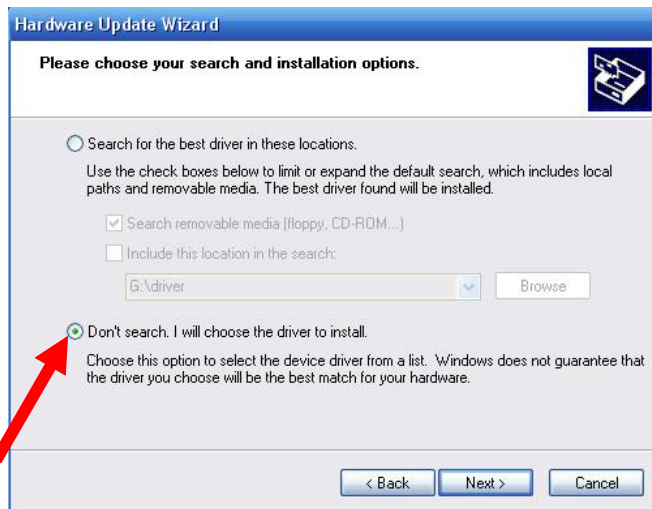


Choice this option and click” Next”


You will see

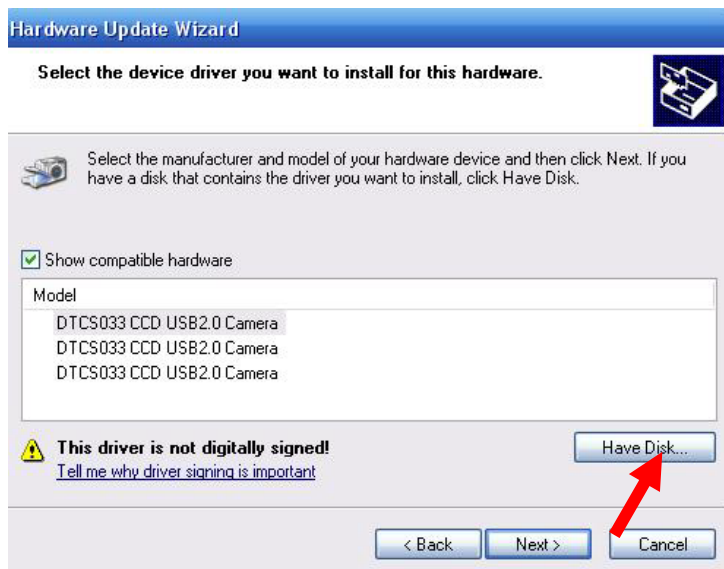


Click “Have Disk...”. you will see

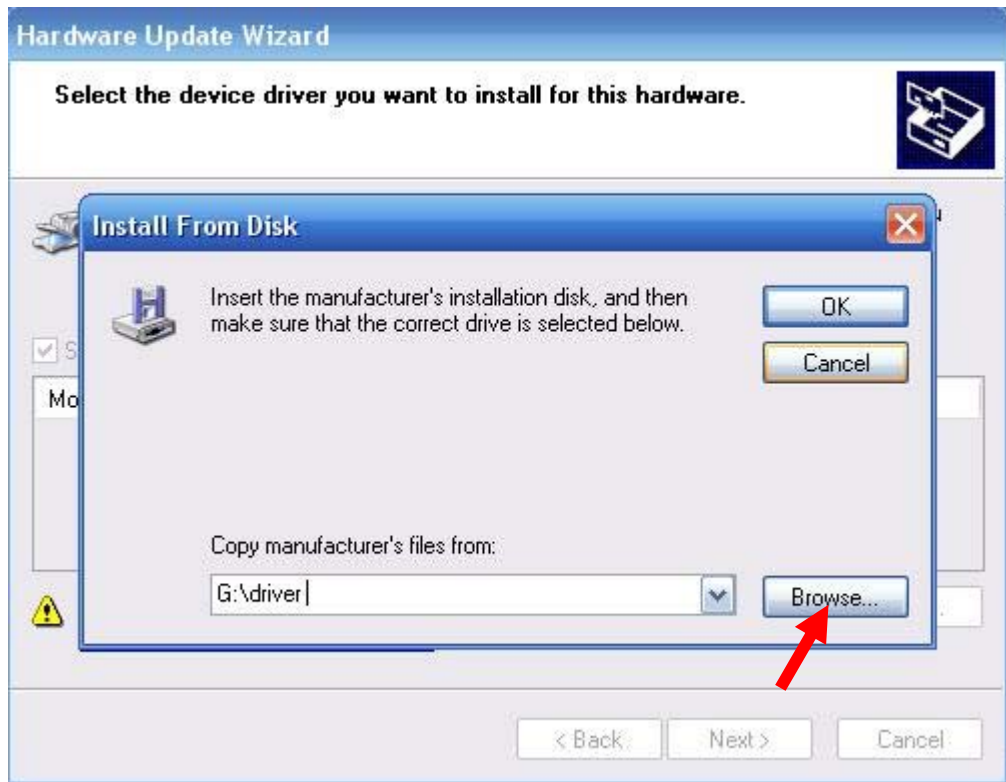

Choice Browse to discover and choice the DTC033.inf file from the CD or the hard disc if you saved before.

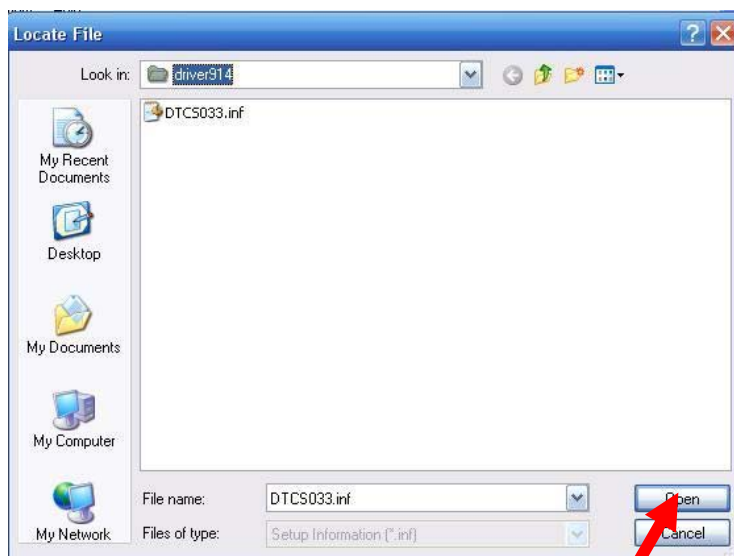

Choise DTC033.inf finle and click “Open”

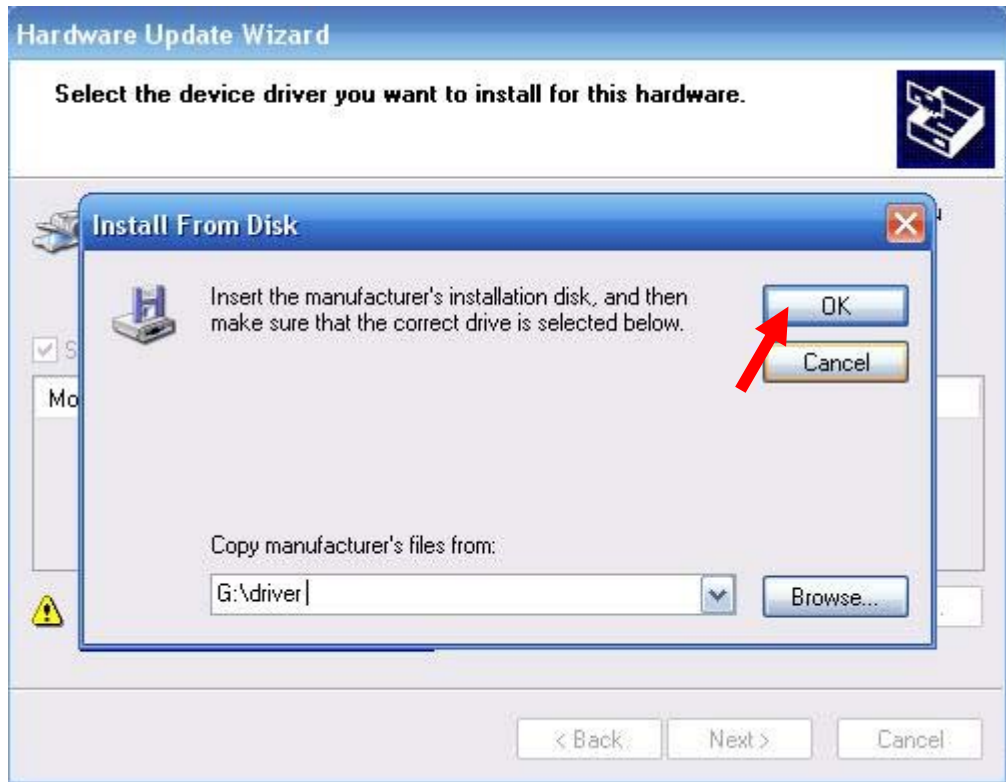

Click "OK"




Click "Next"



Click “Finish”

3. If the Image without any prompt information and not work correctly as well. Please update the drive to your computer thru the Device Manager.

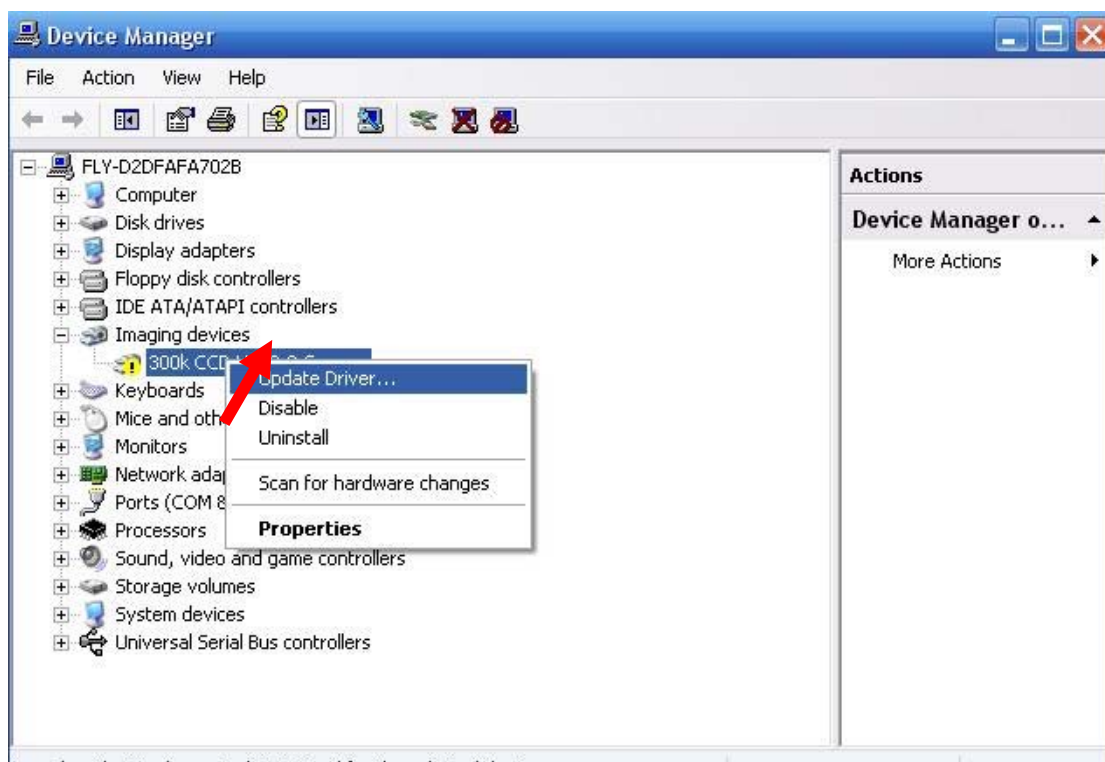

Please choice with the arrowhead. Then follow above #2.